 


zidoo X8

Simple Manual

1/ INTERFACE

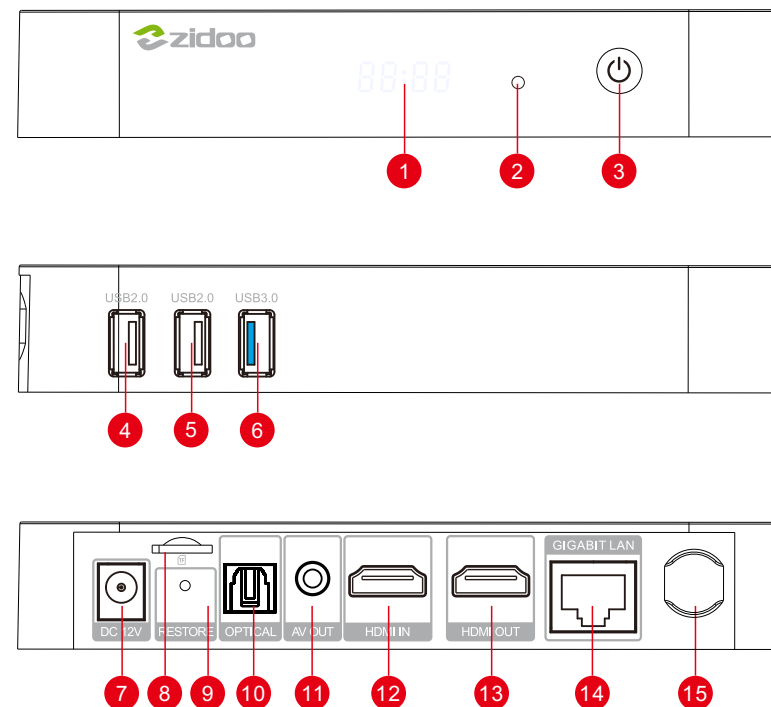

- 1.VFD display
- 2.IR receiver
- 3.Power button (with LED light)
- 4.USB 2.0 (Connect USB devices, such as U disk)
- 5.USB 2.0 (Connect USB devices, such as U disk)
- 6.USB 3.0 (connect USB devices, delivery faster)
- 7.DC 12V; 12V
- 8.TF card reader ; Support 1GB/2GB/4GB/8GB/16GB/32GB.
- 9.RESTORE.
- 10.OPTICAL.
- 11.AV OUT (Composite video and audio port); To connect TV set with AV cable.
- 12.HDMI2.0 Input; support Picture in Picture (PIP) function.
- 13.HDMI Output; HDMI2.0a.
- 14.GIGABIT LAN; RJ-45 Ethernet Jack (10/100/1000Mbps); To connect home network devices (routers/switches, etc.).
- 15.External high-gain single Antenna .


Note:Above interfaces are only for reference ,please make the final goods as the standard.

website;www.zidoo.tv
support;service@zidoo.tv

2 / PREPARE

Step 1

Use the HDMI cable to connect X8 TV BOX with your TV set or projection device. If it is an old TV, please use AV cable to connect X8 TV BOX with your TV set.

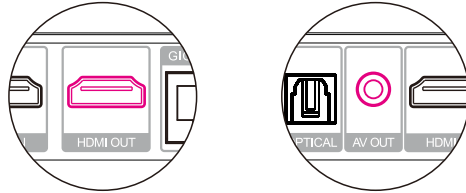


Step 2

Remote Controller: please put the batteries inside the RC. If you will not use the RC for a long time, please take out the batteries.



Step 3

Connect the power

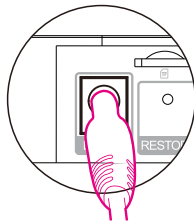

Step 4

Turn on the TV, turn on X8 TV BOX



3 / REMOTE CONTROL

Operational guidelines for learning function:

Step 1

Pressing "AV/TV" (around 8-10s), unloosing until the light long on (red).

Step 2

Single-click one of the learning buttons on this remote control, the light will flash slowly;



Step 3

Keeping a face-to-face state with the launcher mouth of two remote controls, distance from 1~3cm.

Step 4

Pressing the learning button that you need to learn with the TV RC for several seconds, unloosing until the light long on, when the light off, it means it's finished its learning.

Step 5

If you want to learn other buttons, just repeat Step 2; after finishing learning; press "AV/TV" to exit the learning state.



4 / FAULT DIAGNOSIS

Item	malfunction	may because of..	how to do..
1	TV display nothing after turn on the box.	Power of the TV didn't on	Turn on the power of TV
2	Lan cable connected, but box didn't display after having turned on.	HDMI cable is not connected with TV	Check the HDMI cable connection, setup HDMI output in TV
3	No sound output when playing videos	setup volume at 0	volume+
4	Remote control doesn't work	Battery problems	Check the batteries
		There is obstade between RC and TV box	clear the obstade
		The angle is too large between RC and TV box	keep the angle $\leq 160^\circ$